2.Exploded Views and Parts List

2-1 Cassette Deck Exploded View and Parts List

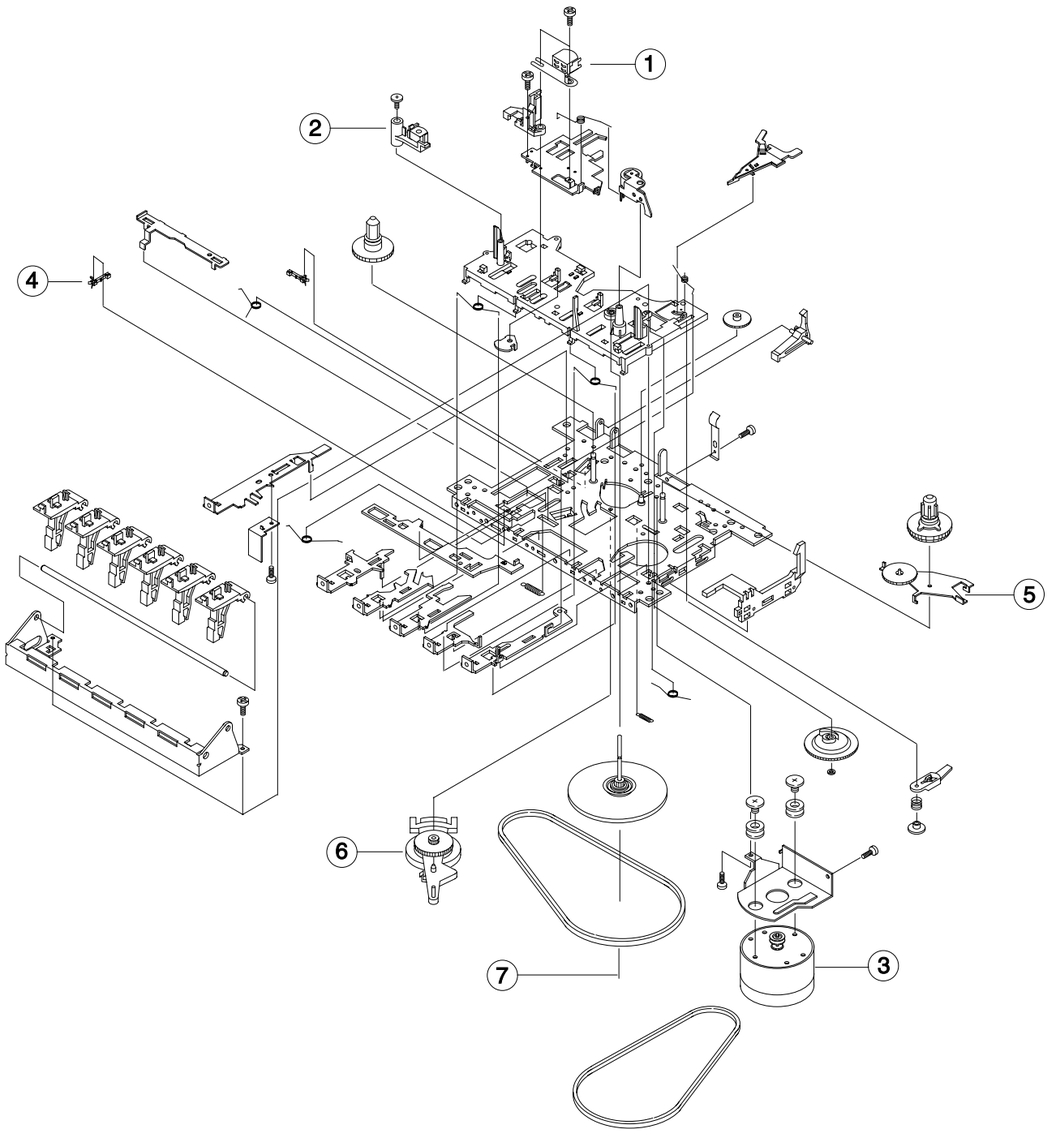

No.	Code No.	Description	Specification	Remarks
	AH59-01167A	**DECK-CASSETTE**	**ADR2083FR2,A/STOP**	**DC12V**
1	AH81-01001A	A/S-R/P HEAD	DZS15R-120N1	
2	AH81-01002A	A/S-ERASE HEAD	TC230AN	
3	AH81-01003A	A/S-MOTOR	EG-530AD-2B	
4	AH81-01004A	A/S-LEAF SWITCH	MSW-1541XACV	
5	AH81-10025E	A/S-IDLER ARM ASSY	ADR02-042	
6	AH81-10025J	A/S-FR ARM ASSY	ADR22-012	
7	AH81-10026V	A/S-BELT(MAIN)	PI45.5XT1.0	

2-2 Main Exploded View and Parts List

2-2-1 Exploded View ; RCD-S30

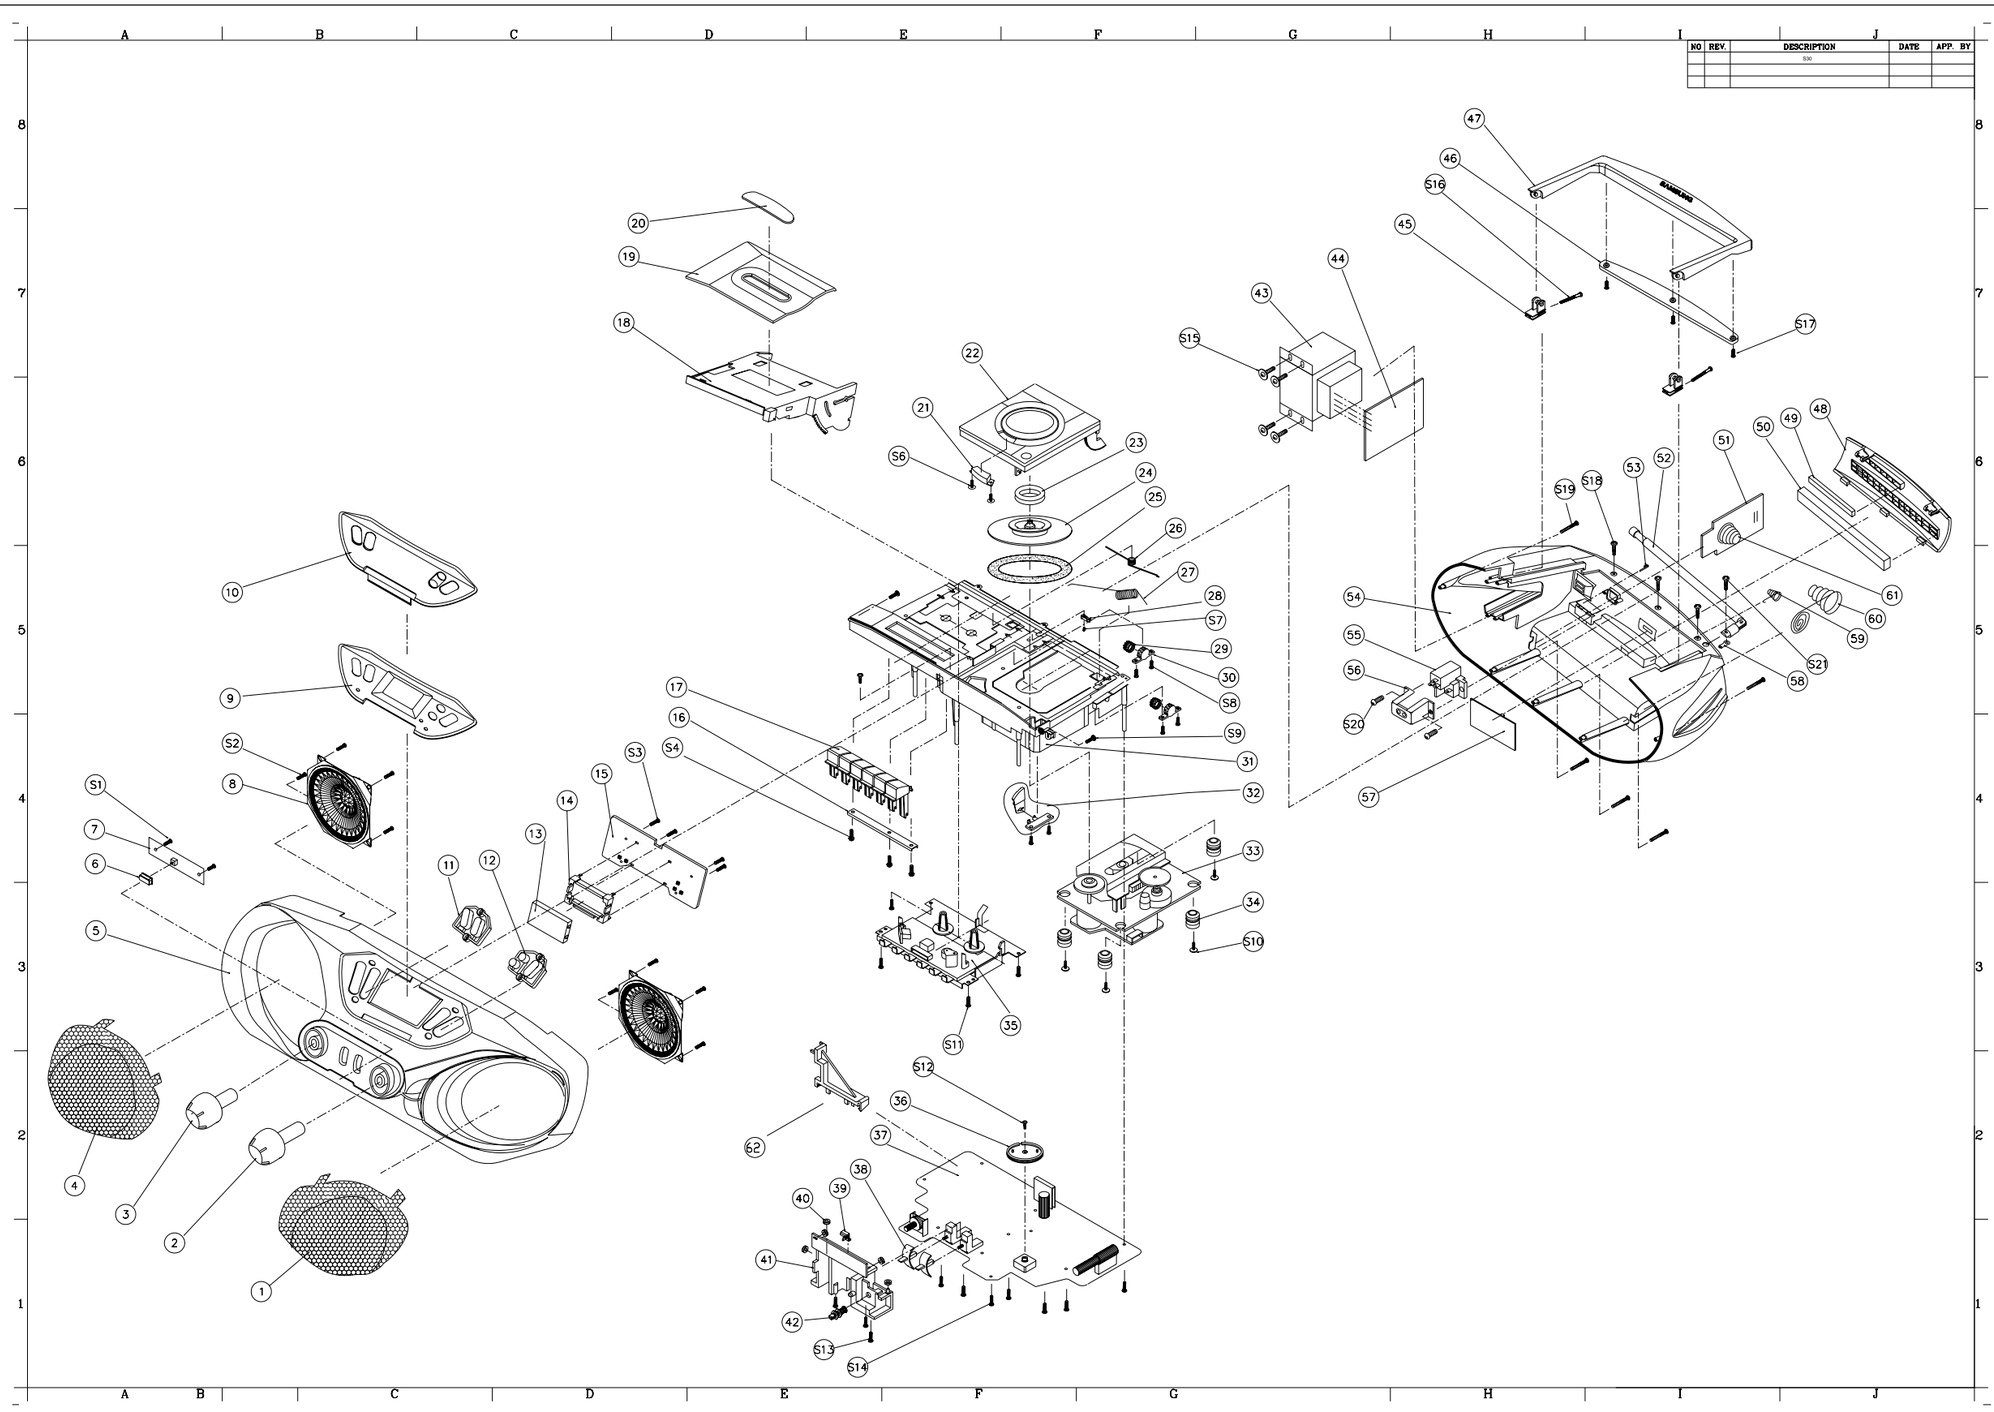

2-2-2 Parts List

No.	Code No.	Description	Specification	Q'TY
1	AH81-00402G	SPEAKER GRILLE R	762-S30GS7-000	1
2	AH81-00409E	TUNING KNOB RCD-S35 MPJ7	535-2060J7-000	1
3	AH81-00410D	VOLUME KNB RCD-S35 MPJ7	535-2074J7-000	1
4	AH81-00403G	SPEAKER GRILLE L	761-S30GS7-000	1
5	AH81-00407G	FRONT CABINET CD-S35 W8	535-2010W8-020	1
6	AH81-00413E	SUPER BASS KNOB RCD-S35	535-2072W8-010	1
8	AH81-00836J	SPEAKER 4 4 OHM 3W W/BLK CAP	154-494030-459	2
9	AH81-00408H	LENS DISPLAY COVER RCD-S35	530-2450J7-000	1
10	AH81-00408G	DISPLAY LENS RCD-S35	535-280400-010	1
11	AH81-00448J	CD FUNCTION KNOB L RCD-S30	530-2502J7-010	1
12	AH81-00448K	CD FUNCTION KNOB R RCD-S30	530-2503J7-010	1
13	AH81-00828J	LCD REFLECTOR S35	535-280400-000	1
14	AH81-00828D	LCD REFLECTOR HOLDER S35	535-231000-000	1
17	AH81-00979A	CASS KNOB(PAUSE)	530-2101J7-010	1
17	AH81-00979B	CASS KNOB(STOP/EJECT)	530-2102J7-010	1
17	AH81-00979C	CASS KNOB(REWIND)	530-2103J7-010	1
17	AH81-00979D	CASS KNOB(F.F.)	530-2104J7-010	1
17	AH81-00979E	CASS KNOB(PLAY)	530-2105J7-010	1
17	AH81-00979F	CASS KNOB(RECORD)	530-2106J7-010	1
18	AH81-00405F	CASS DOOR BRACKET RCD-S30	530-2290AG-000	1
19	AH81-00406H	CASS DOOR RCD-S30	530-2030N5-010	1
20	AH81-00406E	CASS DOOR LENS RCD-S35	535-2720AH-000	1
21	AH81-00425F	CD DOOR LENS RCD-S35 LPAH	535-2803AH-000	1
22	AH81-00425J	CD DOOR CD-S30	530-2490N5-020	1
23	AH81-00827M	CD MAGNET RING 27x17x0.6mm	473-271706-000	1
24	AH81-00828P	CD CHUCK M S35	535-235000-000	1
25	AH81-00827A	FELT PAPER	419-948905-005	1
26	AH81-00827F	CASS DOOR SPRING #35/55/30/50	766-303550-000	1
27	AH81-00827K	SPRING FOR CD DOOR#30/50/35/55	479-305055-000	1
29	AH61-80030A	DAMPER ASS'Y		2
31	AH81-00404H	CABINET TOP CD TRAY RCD-S30	530-2470W8-010	1
32	AH95-50001A	LATCH ASS'Y	846-303550-000	1
34	AH81-00827P	VIBRATION RUBBER 40*(GREEN)ALPHA SUPPLY	458-303550-040	4
36	AH81-00828F	DIAL DRUM S35	535-223000-000	1
38	AH81-00412D	BAND SWITCH KNOB RCD-S35 J7	535-2082J7-000	2
39	AH81-00828E	DIAL POINTER S35	535-209064-000	1
40	AH81-00827U	SLIP GEAR MW1010K (only s30/35)	510-124900-000	5
41	AH81-00828C	DAIL POINTER BRACKET S35	535-230000-000	1
42	AH81-00827C	TUNING SHAFT ASS'Y	450-290800-000	1
45	AH81-00828H	HANDLE HOOKER S35	535-237000-000	2
46	AH81-00398T	HANDEL PLATE RCD-S35 LPN5	535-2050N5-001	1
47	AH81-00398S	HANDEL RCD-S35 MPN5	535-2050N5-000	1
48	AH81-00397F	BATTER DOOR RCD-S35 MPN5	535-2040N5-000	1
52	AH81-00827L	ROD ANTENNA 3SECTION	155-303550-000	1
54	AH81-00417F	BACK CABINET CD-S35 MPN5	535-2020N5-000	1
56	AH81-00827T	COVER FOR AC SOCKET	500-025100-000	1
58	AH81-00827Y	BRACKET ANTENA	451-340000-000	1
60	AH81-00827H	BATTERY SPRING (+/-)	763-303550-000	1
61	AH81-00827G	BATTERY SPRING (-)#30/50/35/55	764-303550-000	2
62	AH81-00827E	RECORDING LEVER		1

2-3 CD Deck Exploded View and Parts List

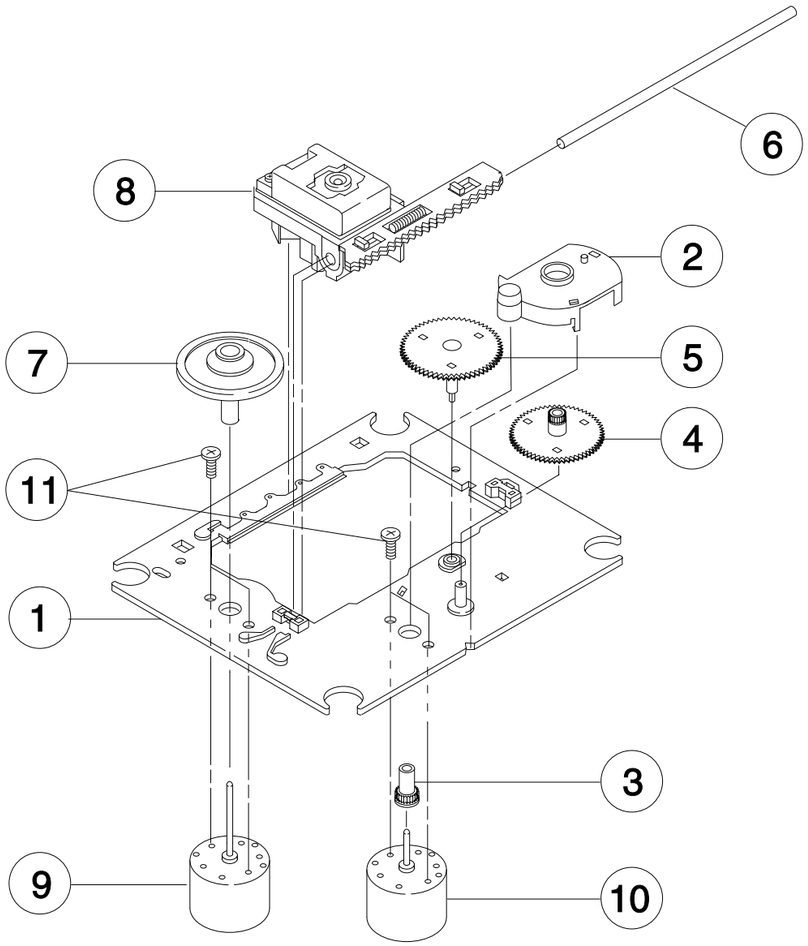

No.	Code No.	Description	Specification	Remarks
	AH81-00568R	**CD MECHA**	**P31TG6U(CMS-P31)**	
1	AH81-00635A	CHASSIS-DECK(M)	AJ70-00601E	
2	AH81-00635D	COVER-GEAR	AJ66-00601G	
3	AH81-00635B	GEAR(A)	AJ66-00601D	
4	AH81-00635E	GEAR(B)	AJ66-00601B	
5	AH81-00635F	GEAR(C)	AJ66-00601F	
6	AH81-00635G	SHAFT-PU	AJ70-00601A	
7	AH81-00635H	TURN-TABLE(T)	AJ72-00602A	
8	AH81-00635J	SOH-AA	AJ75-00601F	
9	AH81-00635K	MOTOR-SPINDLE	AJ31-00601C	
10	AH81-00635C	MOTOR-FEED	AJ31-00601A	
11	AH81-00635L	SCREW-PH	AJ60-00601D	